visionary DESIGNS™ © 2020

Order #XXXXX VK-1332 General Layout

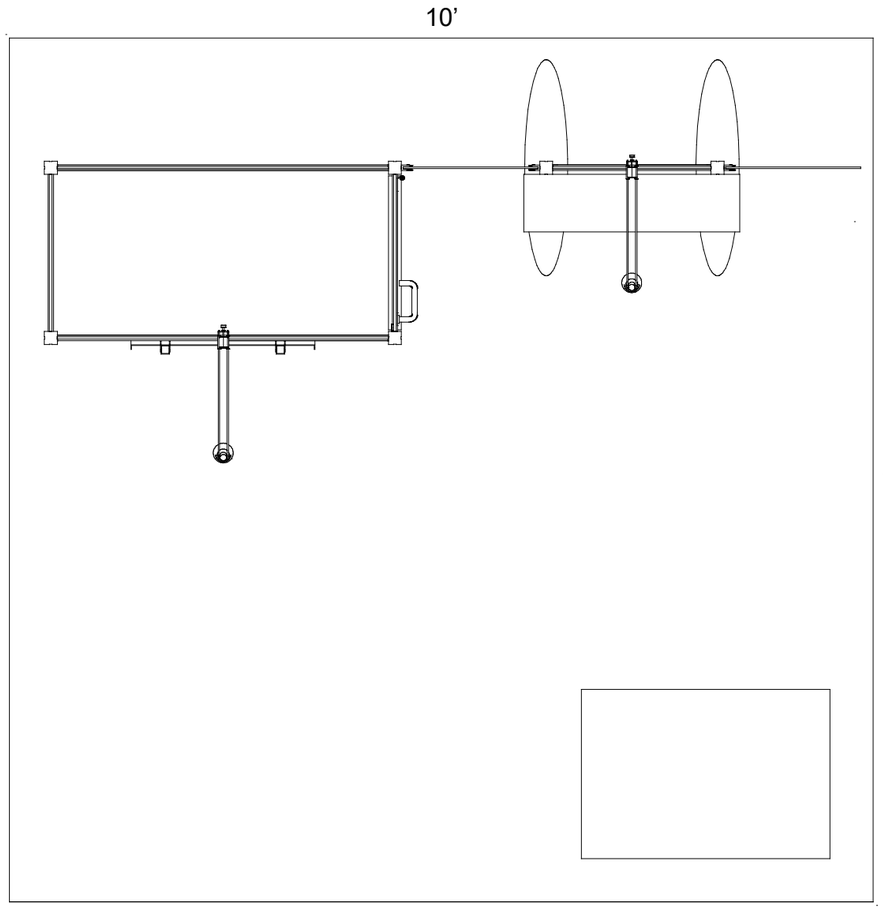

Top View

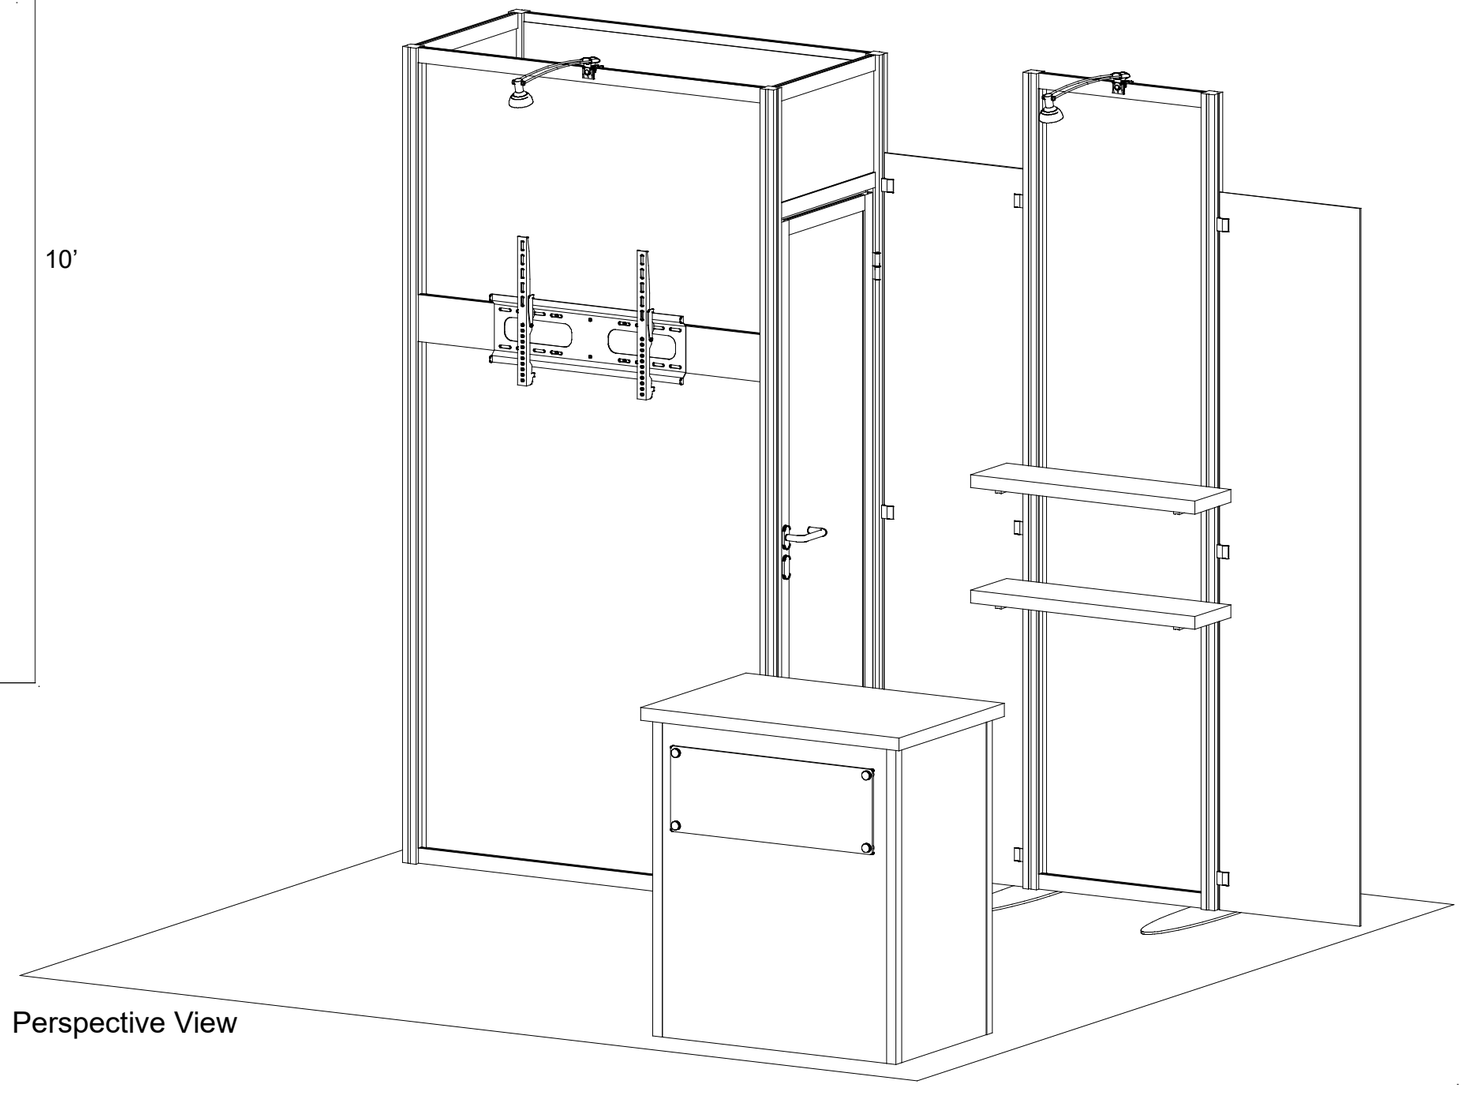

Perspective View

SETUP INSTRUCTIONS

If you would like to tell us about your experience with your setup instructions please email us at **info@classicexhibits.com**

© 2020

Order #XXXXX Grid View

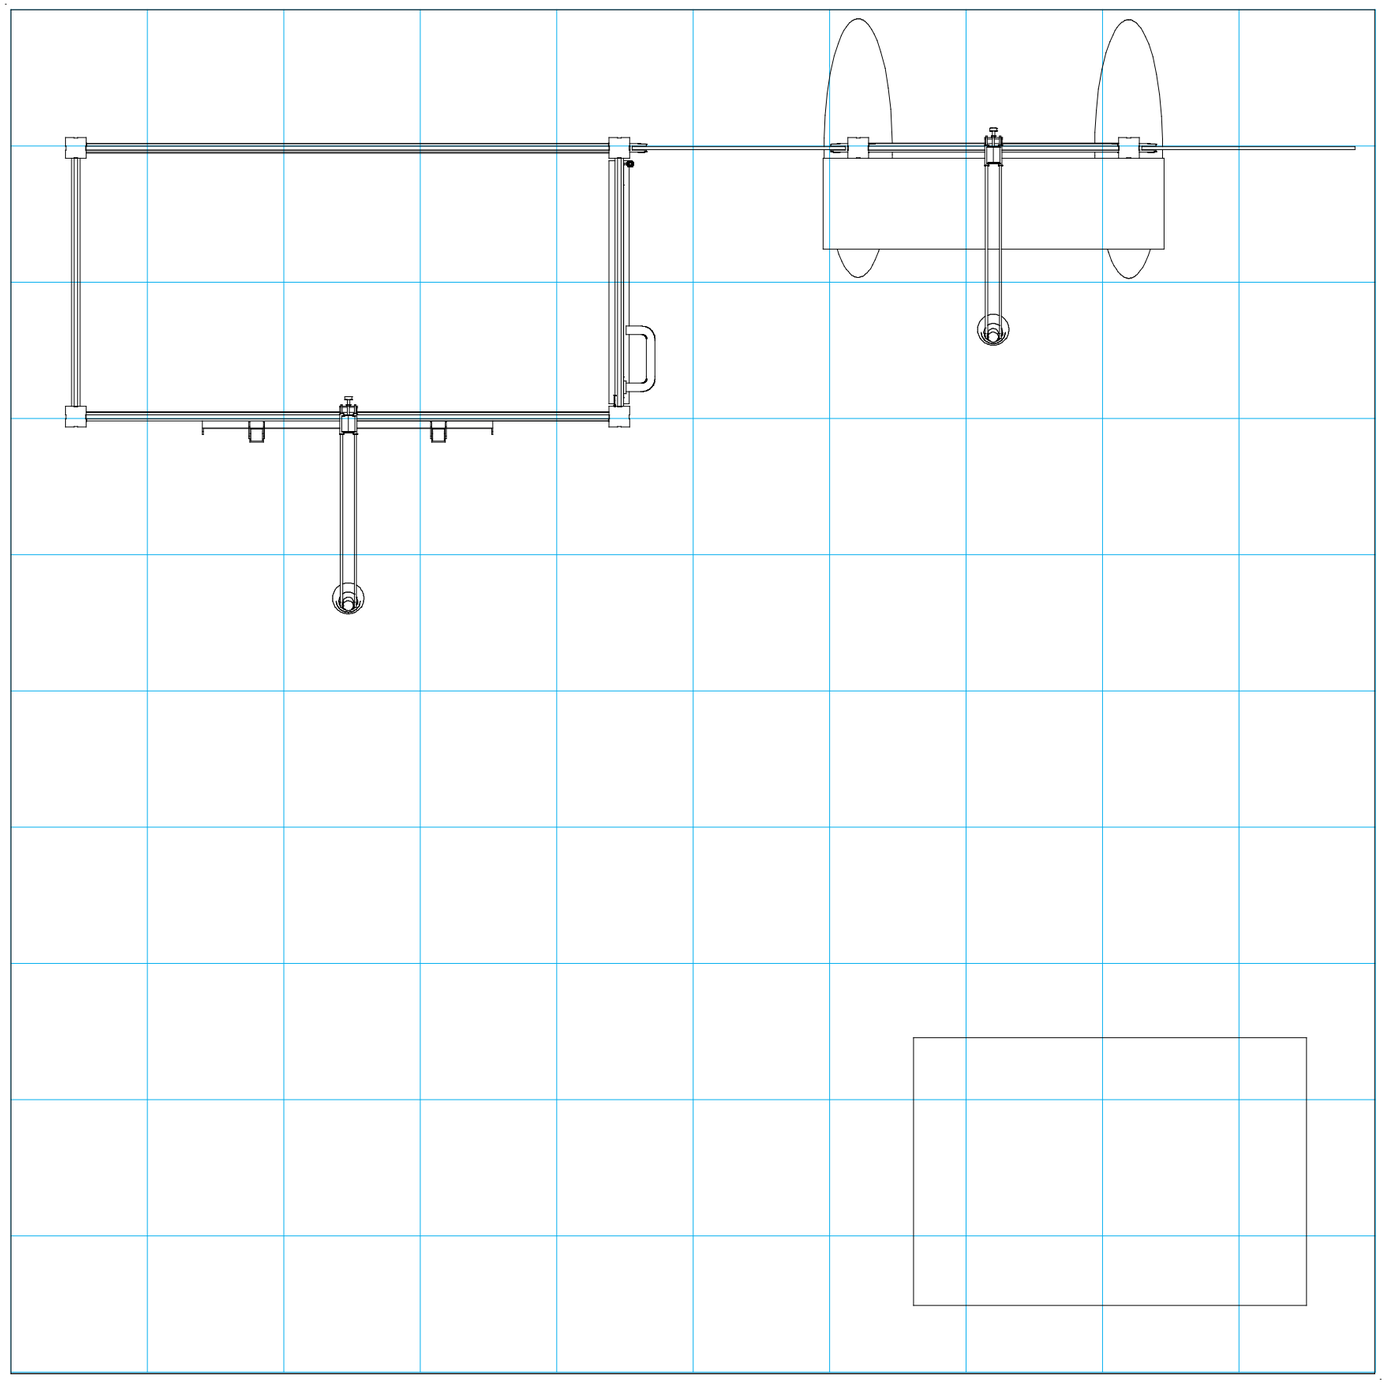

= 1 sq foot

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.

- The setup instructions are created specifically for this configuration.

- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.

- Keep exhibit components away from heat and prolonged sun exposure. **Heat and UV exposure will warp and fade components.**

- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

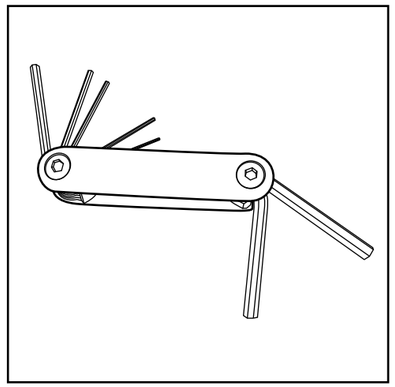

Hex Tool - Essential for Assembly

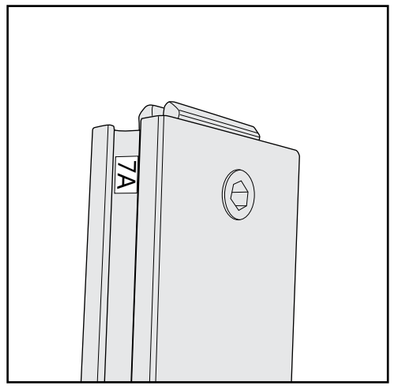

Part Identification - Numbering

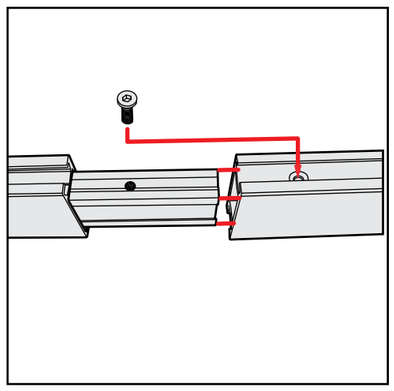

Spline Connection

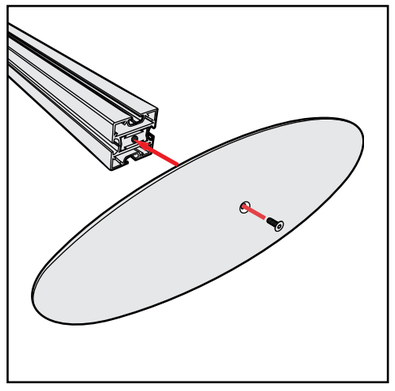

Base Plate & Extrusion Connection

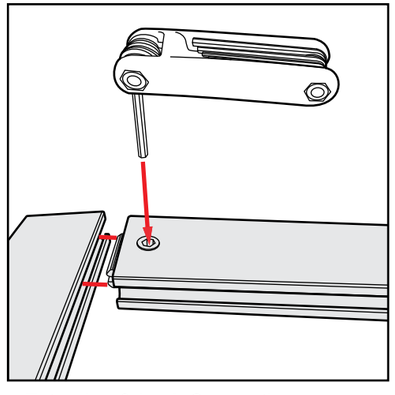

Extrusion & Lock Connection

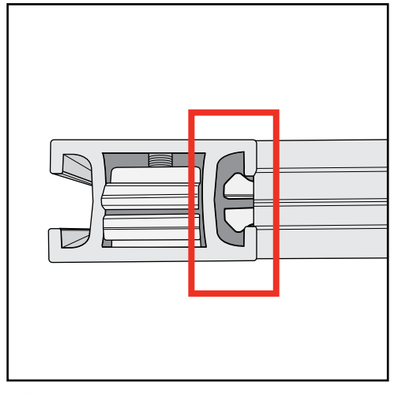

Engaged Lock

WARNING

DO NOT USE POWER TOOLS

LADDERS OR LIFTS MAY BE REQUIRED

ALL CONNECTIONS MUST BE TIGHTLY SECURED

© 2020

Order #XXXXX Crate Packing

Order #XXXXX Closet Assembly

Item	Qty.	Description
1	1	95.5” S44 Vertical Extrusion w/ PR37
2	1	95.5” S44 Vertical Extrusion w/ PR37 w/ Door Hinge
3	1	95.5” S44 Vertical Extrusion w/ PR37 w/ Door Stop
4	1	95.5” S44 Vertical Extrusion w/ PR37
5,5A	2,2	45” Z45 Horizontal Extrusion
6	4	21.833” Z45 Horizontal Extrusion
7	1	45” Z140 Horizontal Extrusion

Steps:

1) Attach horizontals [5] and [5A] between verticals [1] and [2], making sure Velcro is facing inward.
2) Attach horizontals [6] between verticals [2] [3] and [1] [4], with infills between, as shown.
3) Attach horizontal [7] between [3] and [4].
4) Connect Door Threshold between verticals [2] and [3]. See Door Threshold Attachment detail.
5) Connect Door between verticals [2] and [3]. See Door Connection detail.

Keep PR37 attached to extrusions [1] [2] [3] and [4], when packing.

Keep closet sides assembled, when packing.

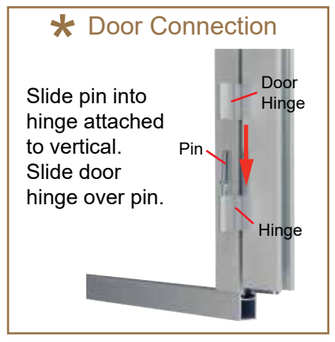

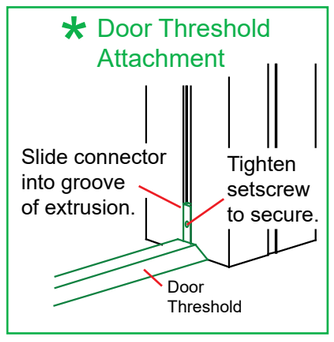

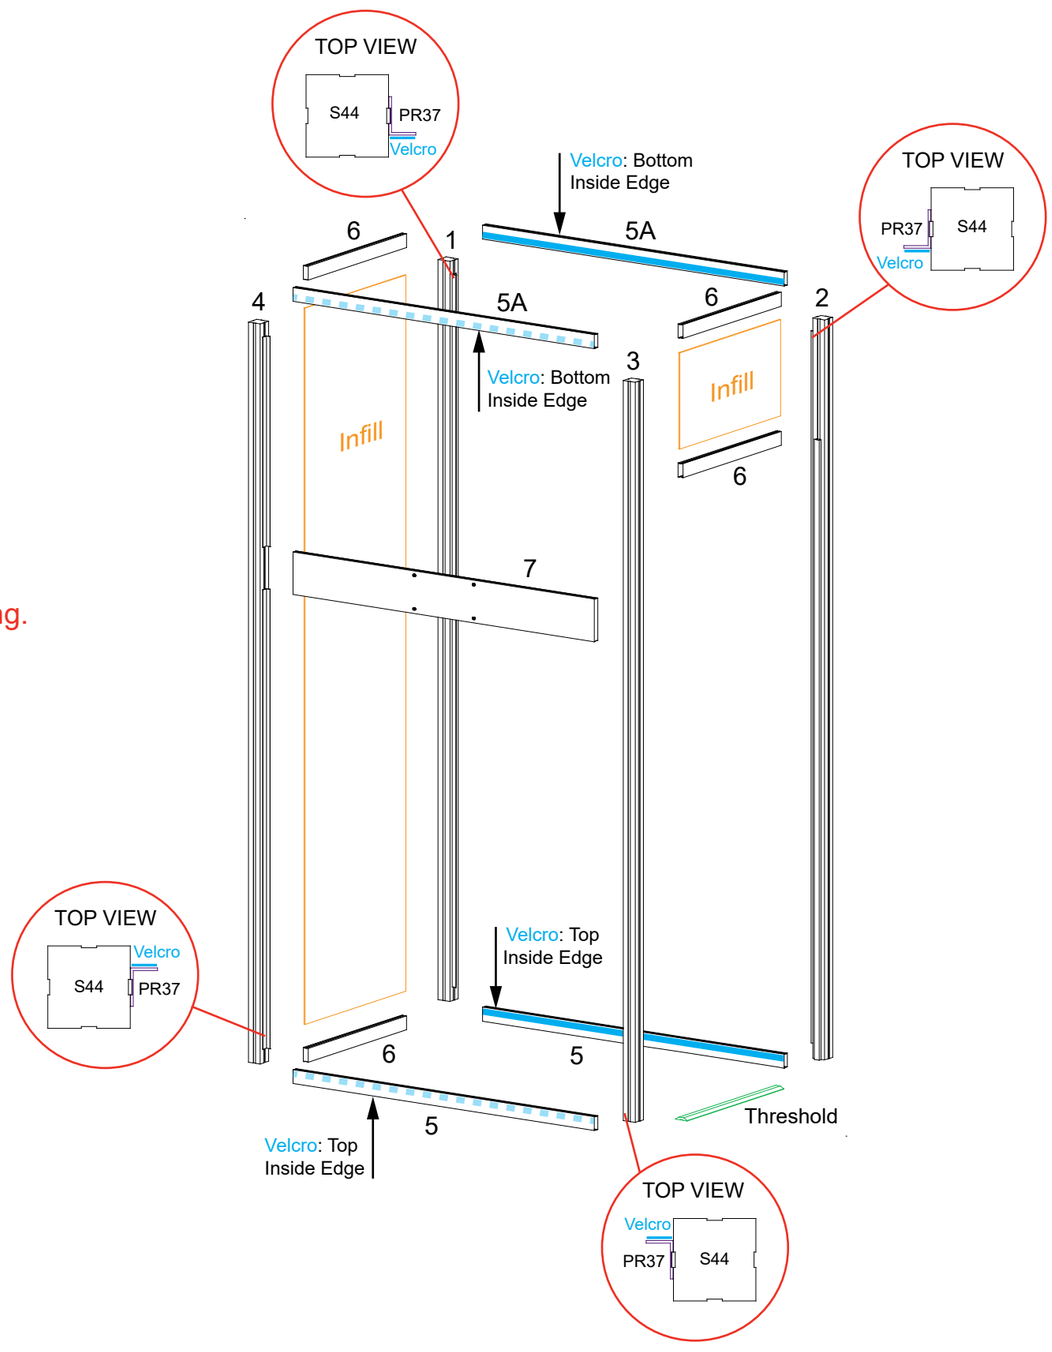

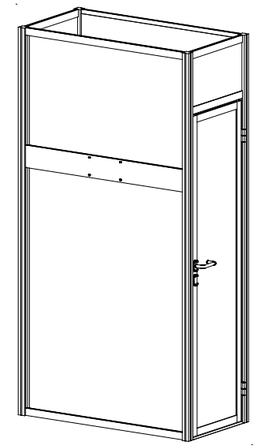

Completed Assembly

Item	Qty.	Description
8	1	Base Plate
9	1	95.5” S44 Vertical Extrusion w/ PR37
10	2	95.5” S44 Vertical Extrusion w/ PR37
11	2	22” Z45 Horizontal Extrusion
--	2	18.75”w x 84”h Panel

Steps:
1) Attach base plates [8] to verticals [9] and [10], using bolts.
2) Attach horizontals [11] between verticals [9] and [10], making sure Velcro is facing toward back.
3) Attach clamps to vertical [2]. See Clamp Attachment detail.
4) Attach panels to clamps, as shown.
5) Connect fabric graphics to Velcro inside closet and back of backwall.

Keep PR37 and clamps attached to extrusions [9] and [10], when packing.

Clamp Attachment

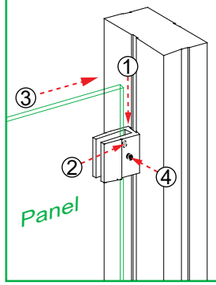

1) Slide clamp into groove of extrusion.
2) Tighten set screw to secure clamp.
3) Insert panel into clamp.
4) Tighten knob to secure panel in place.

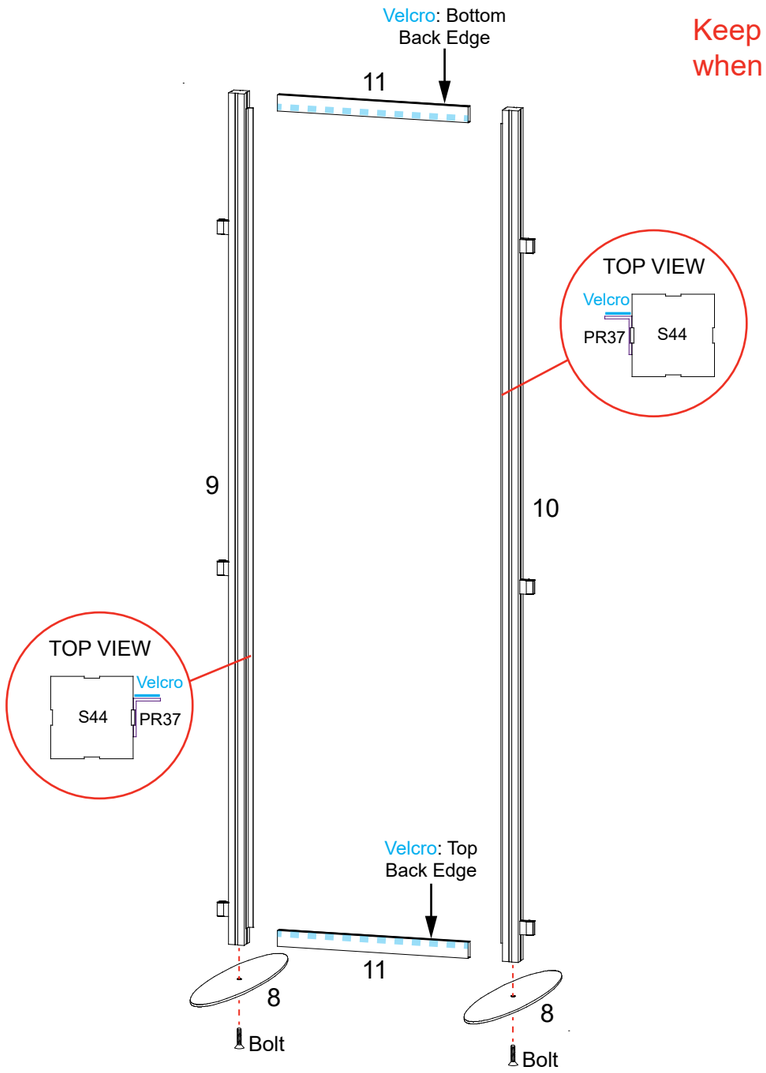

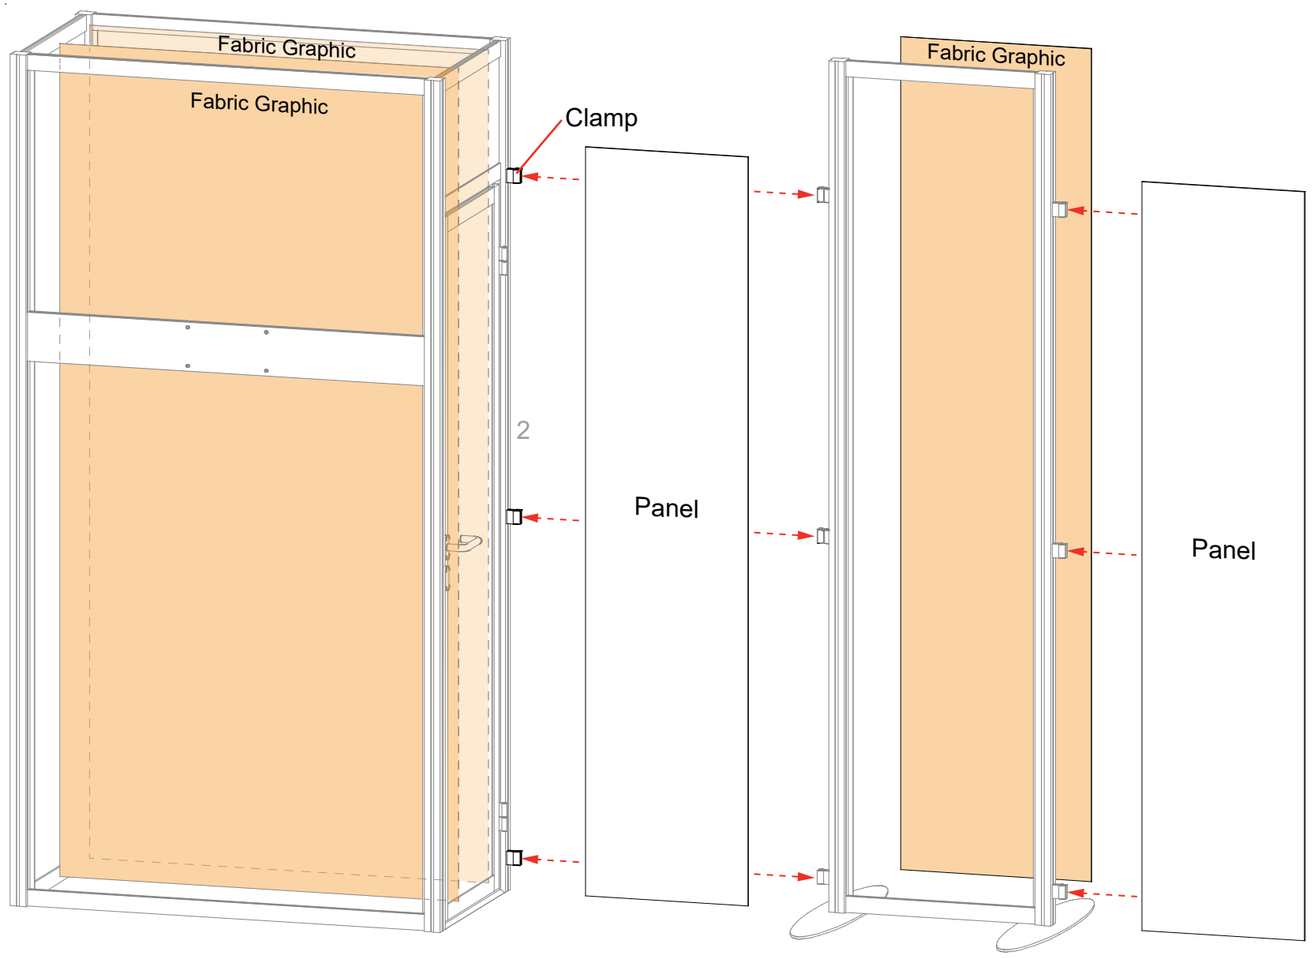

Steps:
1) Attach lights to horizontals [5A] and [11]. See Light Attachment detail.
2) Attach monitor mount to horizontal [7]. See Monitor Mount Attachment detail.
3) Attach shelves to verticals [9] and [10]. See Shelf Attachment detail.

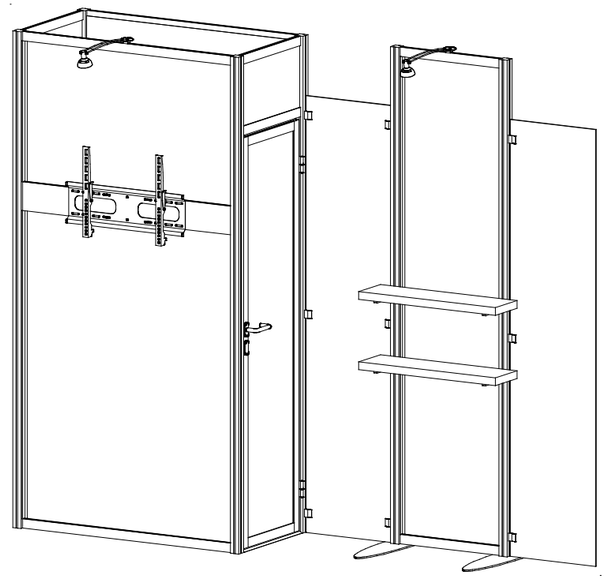

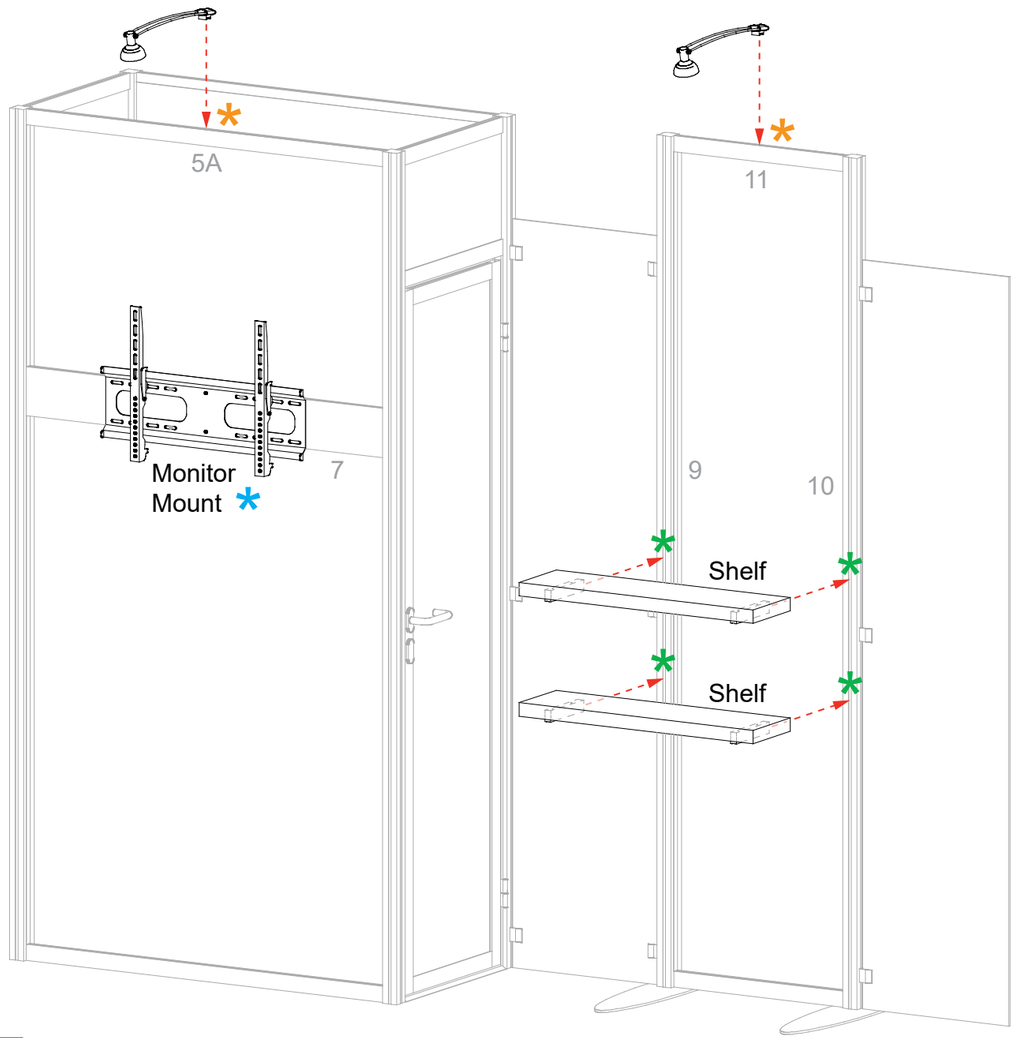

* Light Attachment

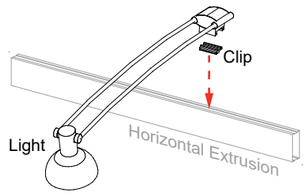

Slide light onto clip then lock clip into groove of horizontal extrusion.

* Monitor Mount Attachment

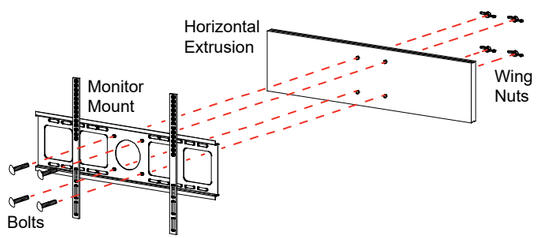

Attach monitor mount to horizontal extrusion, using bolts and wing nuts.

* Shelf Attachment

Insert lock on horizontal extrusion into groove of vertical extrusion, then tighten set screw.

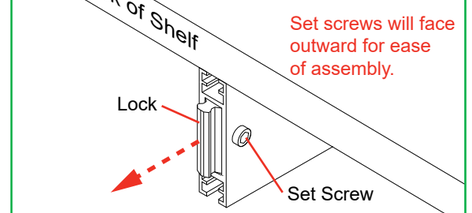

Horizontal extrusion stays attached to shelf.

Item	Qty.	Description
1	1	38”h LT Connector
2	1	30”w x 38”h LT Panel w/ Door
3	1	38”h LT Connector
4	1	19”w x 38”h LT Panel
5	1	38”h LT Connector
6	1	30”w x 38”h LT Panel
7	1	38”h LT Connector
8	1	19”w x 38”h LT Panel

Steps:

1) Assemble panels and connectors in numerical order, making sure Velcro is facing inward.
2) Connect shelf supports to Velcro.
3) Place shelf on top of shelf supports.
4) Lock counter top to panels [4] and [8]. See Counter Top Lock detail.
5) Attach graphic to panel [6], using standoffs and caps.

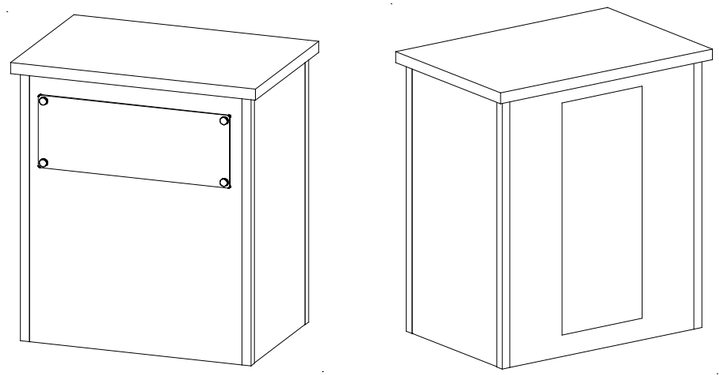

Completed Assembly

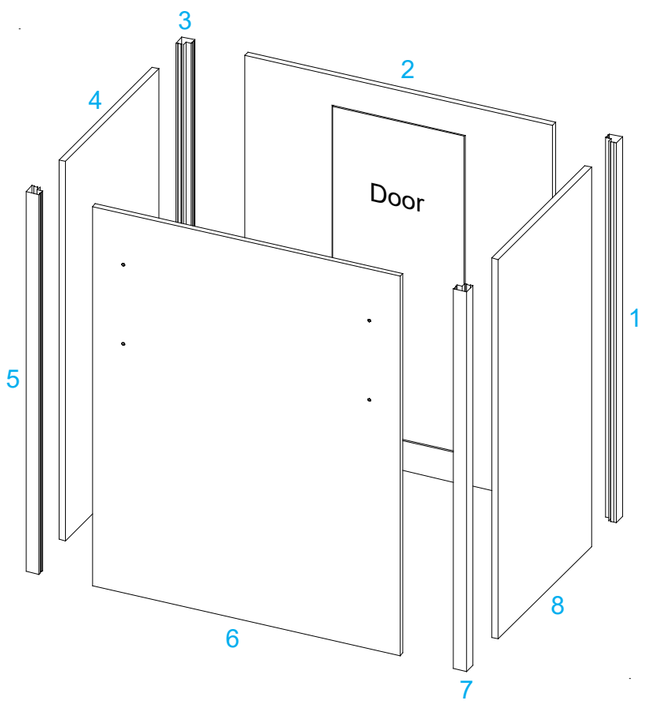

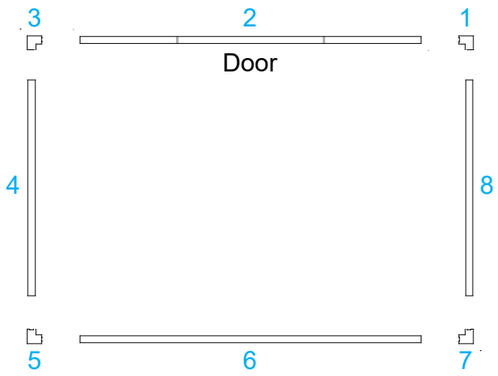

Top View

✱ Counter Top Lock

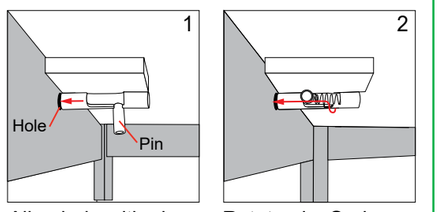

Align hole with pin
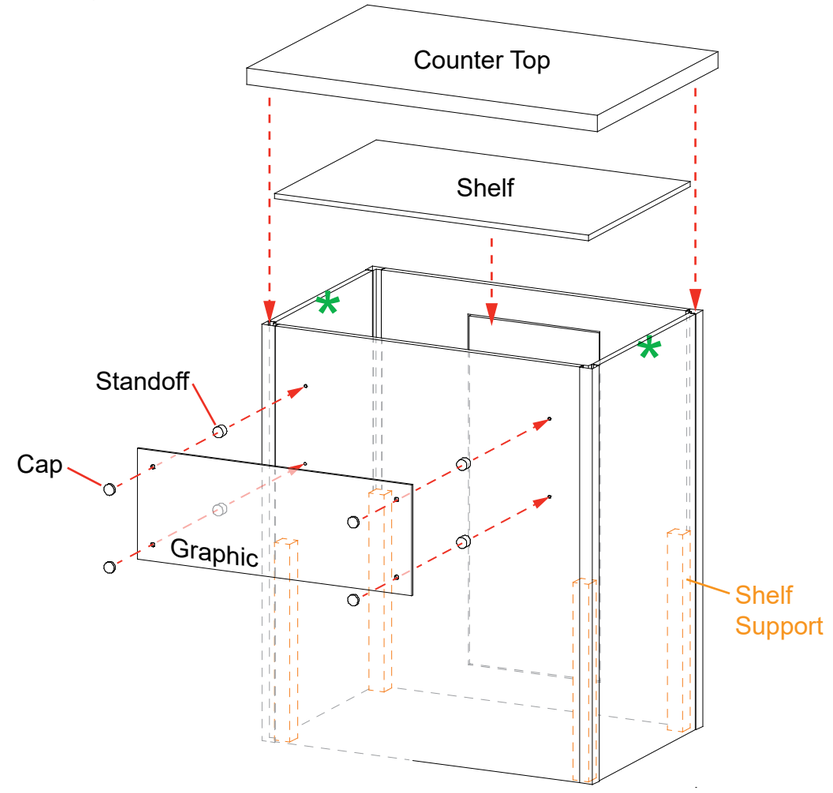
Rotate pin. Spring will push pin into hole.